

Before first use

- Remove any tags/labels and wash in hot soapy water with a non-scratch nylon pan scourer or brush.
- Dry thoroughly.

**Using your cafetiere**

- Do not stand the Cafetiere on precious polished surfaces.
- Remove the entire plunger and lid, and pre-warm the jug with boiling water before use (for maximum heat retention).
- Measure medium-ground coffee into the jug - approximately 1 rounded tablespoon of ground coffee for every three cups of coffee being made (this will vary according to strength of brew and coffee type used and your personal preferences).
- Fill with boiling water to the desired level, (do not overfill - 1cm from below the pouring spout) and gently stir. Hot water is dangerous - **DO NOT OVERFILL**
- Replace the lid and plunger (pulled up). Leave for 5 minutes to infuse.
- Slowly push the plunger down - your coffee is ready to serve.

Cleaning

- After use allow to cool completely, remove contents and soak in hot soapy water for a few minutes before washing.
- Remove coffee deposits with a non-scratch nylon pan scourer or brush and dry thoroughly.

**Dishwasher use**

- Your Cafetiere and all components are suitable for dishwasher use. However as with all quality teaware, hand washing is recommended.
- Dry thoroughly immediately after dishwasher use, or before extended storage.

Stainless steel care

- Recover the original brightness of stainless steel and remove stubborn marks by occasional use of a product such as Steelfix Stainless Steel Cleaner. Available from all good cook shops or from our website.

Replaceable parts

- Over time you will need to replace the fine wire mesh at the bottom of your filter. Please contact Stellar Customer Service for a replacement (contact details under guarantee).
- Unscrew the plunger arm counter-clockwise from the filter, separate the parts, replace the mesh filter and reassemble.

