

Hob suitability



- This Stovetop Espresso Maker is suitable for ALL hob types, including induction.*
- To minimise scratching on a glass hob top, lift do not drag.
- Not suitable for oven or microwave use
- Always use an oven glove when handling or removing from the hob.

* Base diameter 12cm. Please check your hob care & use guide for minimum pan dia.


Induction hob use

- These highly efficient hobs transfer heat to the Stovetop Espresso Maker immediately and can reach extremely high temperatures in seconds.
- The Stovetop Espresso Maker is designed to be as energy efficient as possible, so we strongly advise using a low-medium heat setting. A high heat setting is not advisable as this may damage your Stovetop Espresso Maker or even your hob.
- Always heat the Stovetop Espresso Maker gradually and never use the 'boost' function.

! The Stovetop Espresso Maker is not suitable for oven or microwave use.

Before first use

- Remove any tags/labels/stickers. Wash all items in hot soapy water with a non-scratch nylon pan scourer or brush. Rinse and dry thoroughly.

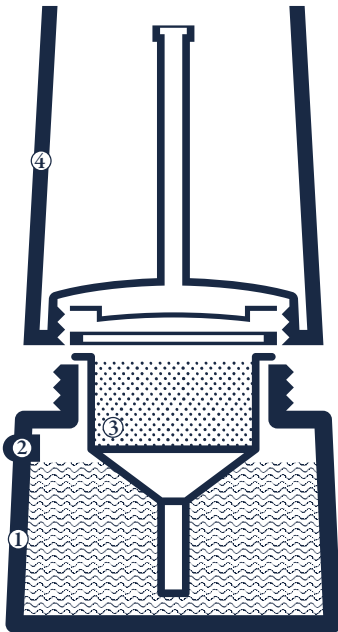

- ① Base
- ② Valve
- ③ Coffee Container
- ④ Top Jug

Assembly and making espresso

1. Fill the Base ① with water up to a level just below the Valve ②.
2. Place the Coffee Container ③ into the Base ① and fill with fine ground Espresso coffee.
3. Screw fit the Base ① onto the Top Jug ④ and take to the hob.
4. Place the Coffee Maker on a medium heat. After a few minutes, listen for your Espresso coffee transferring under pressure to the Top Jug ④.
5. Remove from heat and pour when this process has finished.

Cleaning

- After use, allow the Espresso Maker to cool completely. Remove used coffee, disassemble and soak in hot soapy water for a few minutes before washing.
- Remove coffee deposits with a non-scratch nylon pan scourer or brush and dry thoroughly.



Dishwasher use

- Your Espresso Maker is suitable for dishwasher use. However as with all quality coffee ware, hand washing is recommended.
- Over time fittings/coatings may become discoloured after repeated dishwasher use.

Maintenance

- After a period of time the silicone gasket in the underside of the Top Jug ④ will need replacing. Further gaskets are available from Stellar Customer Service, see reverse.